


## HANDBOOK CUTTER AND CORNER CUTTER

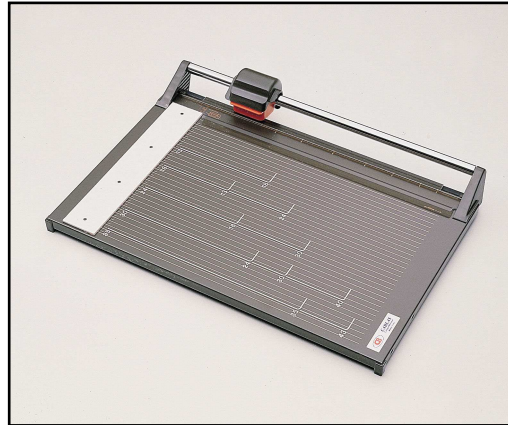

### 1. INTRODUCTION

The cutter is suitable for cutting paper, cardboard, foils and thin foils soft plastics. The self sharpening cutters will give long life and efficient service as far as the maximal capacity under clamp of (1.5 mm ) is not overstepped or unsuitable material is cut.

### 2. OPERATING

Move the cutter head to the bottom the ladder; The operation is used to set the maximum length of cut. If you hold the material with the free hand,too, precision of the cut will be intensified. Place the material squarely against the edge of the guide rule. Use it and also the marking lines on the table to get the required amount of cut. Pull the cutter head quickly along the guide rail to trim the material. With the round blade you can cut in both directions.

### 3. MAINTENANCE

Occasionally clean the glide rail.

CODE	DESCRIPTION
L-TR-00	Cutter size light cm 46 X 15
L-TR-01	Cutter size light cm 51 X 30
L-TR-02	Corner cutter suitable for cutting any size corner